




## Controladores maestros con salida EC

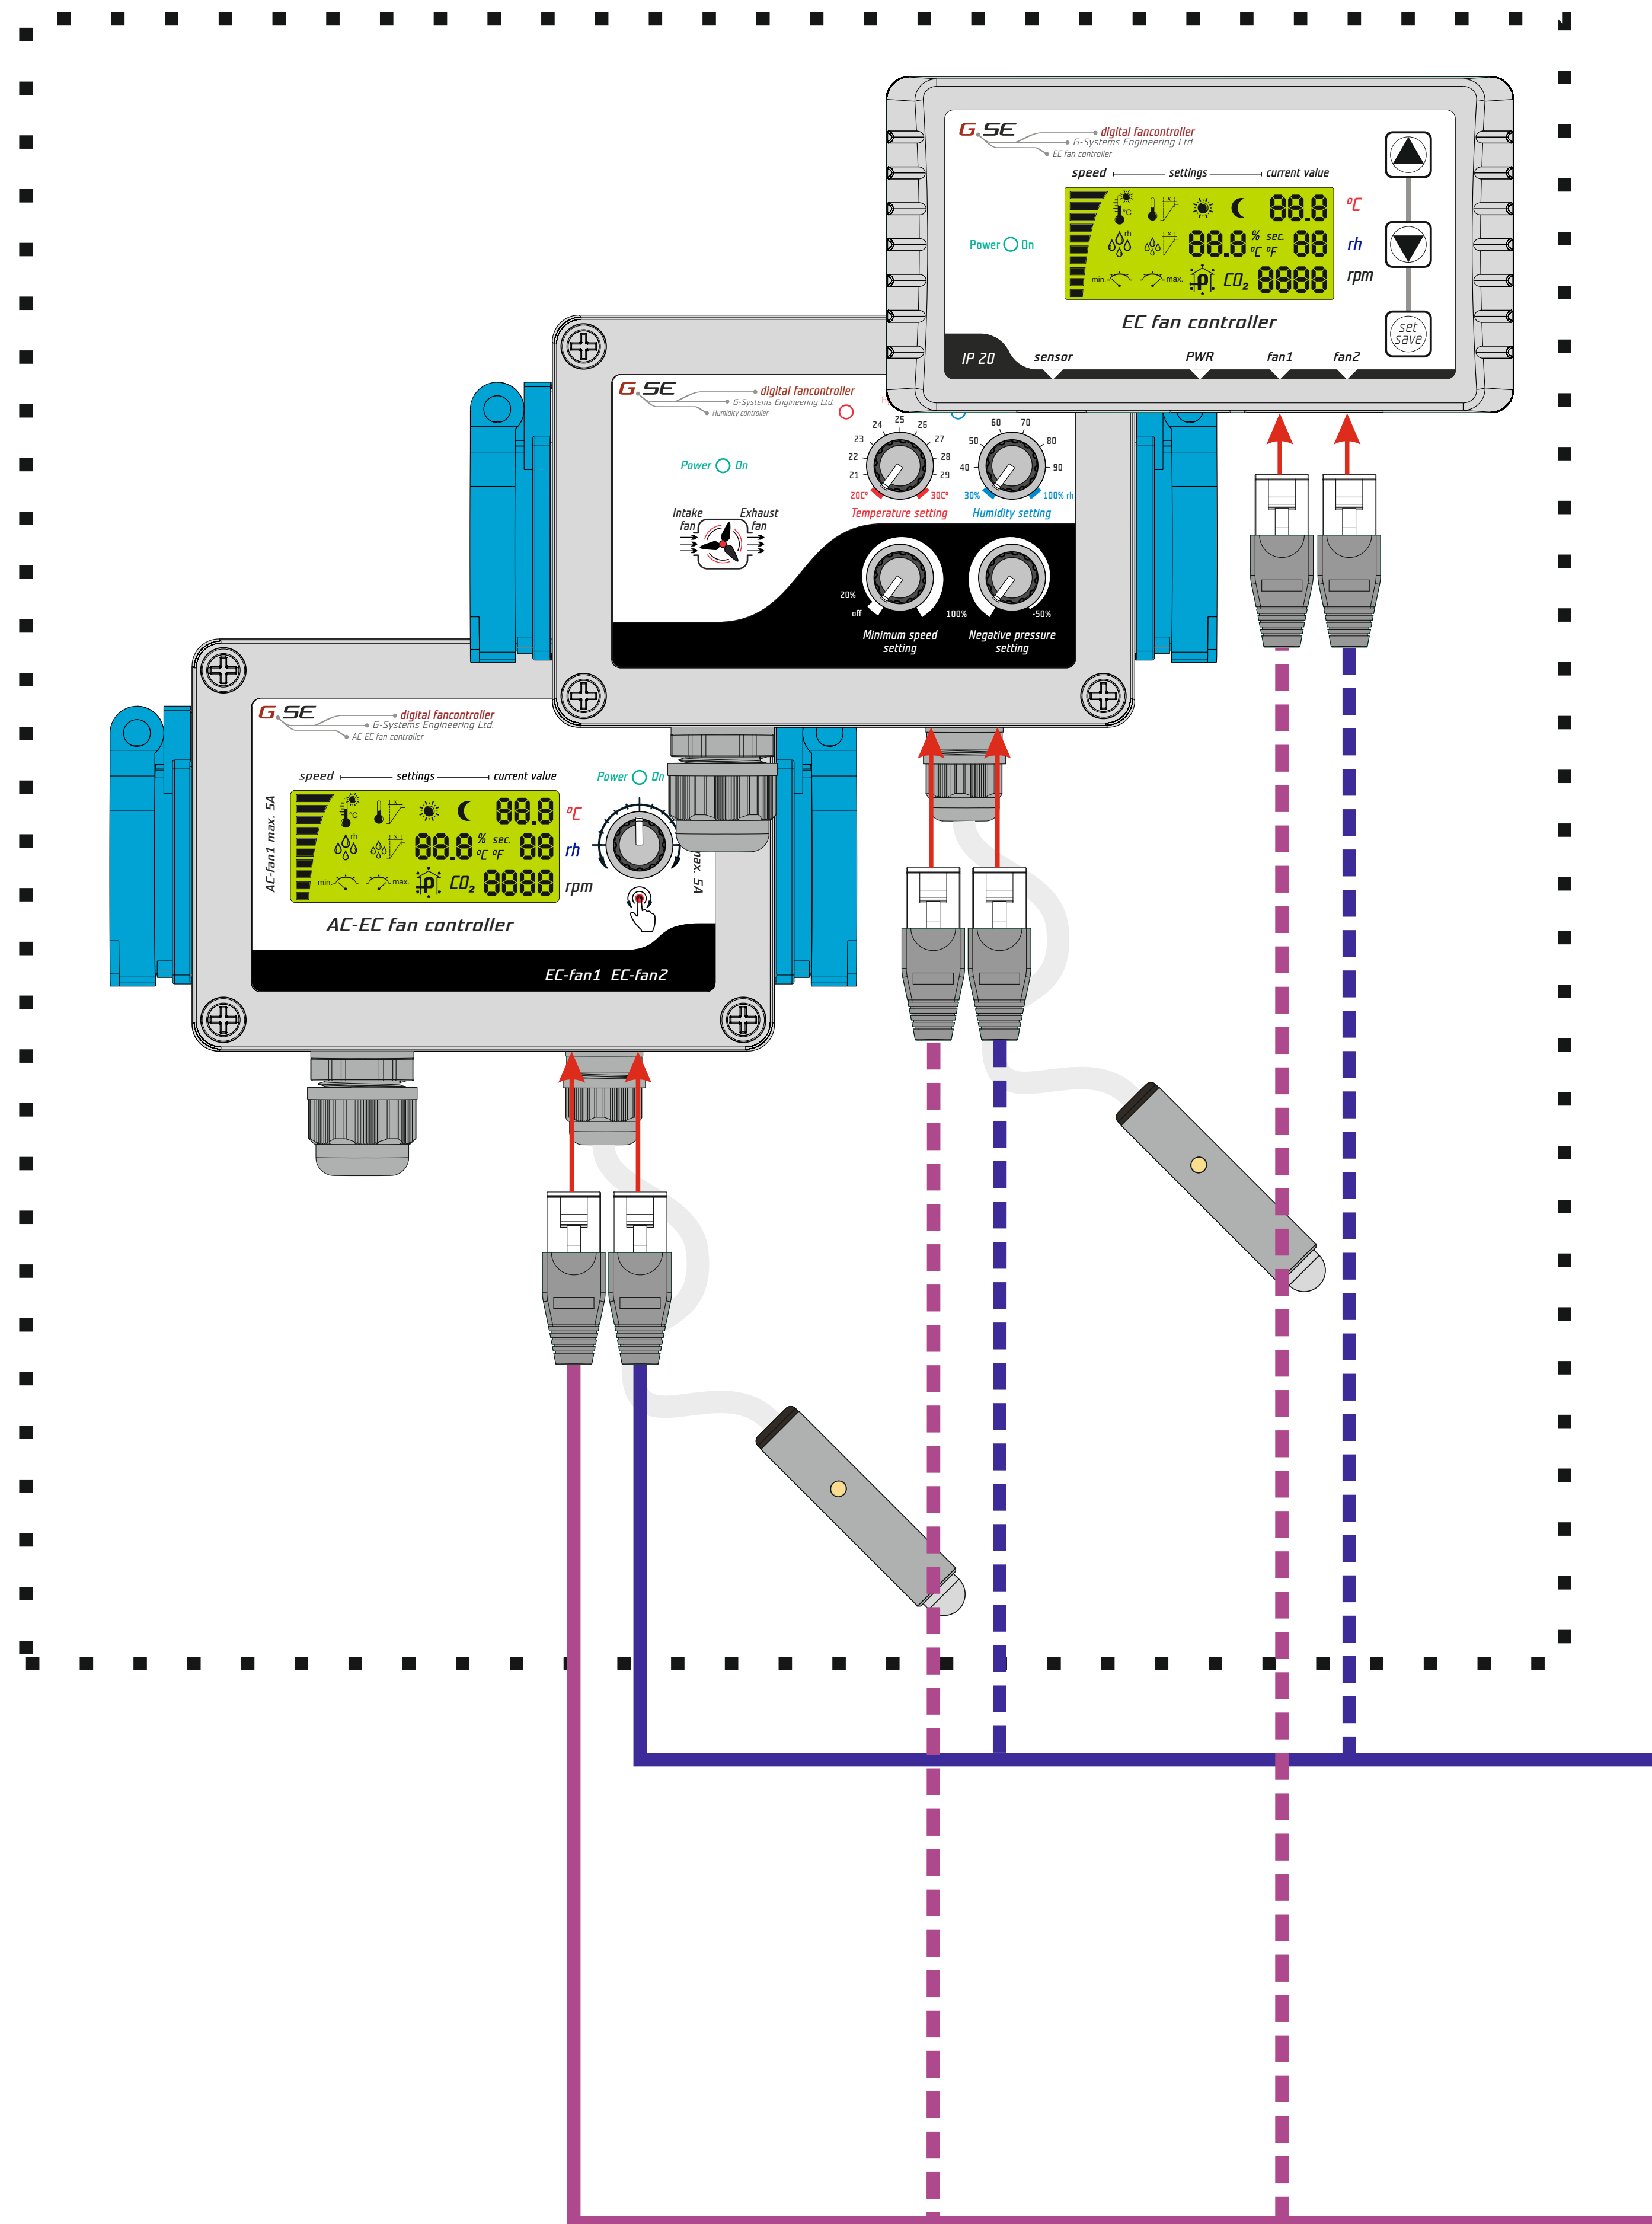

## Satélite para extractor de salida de aire (controladores esclavos)

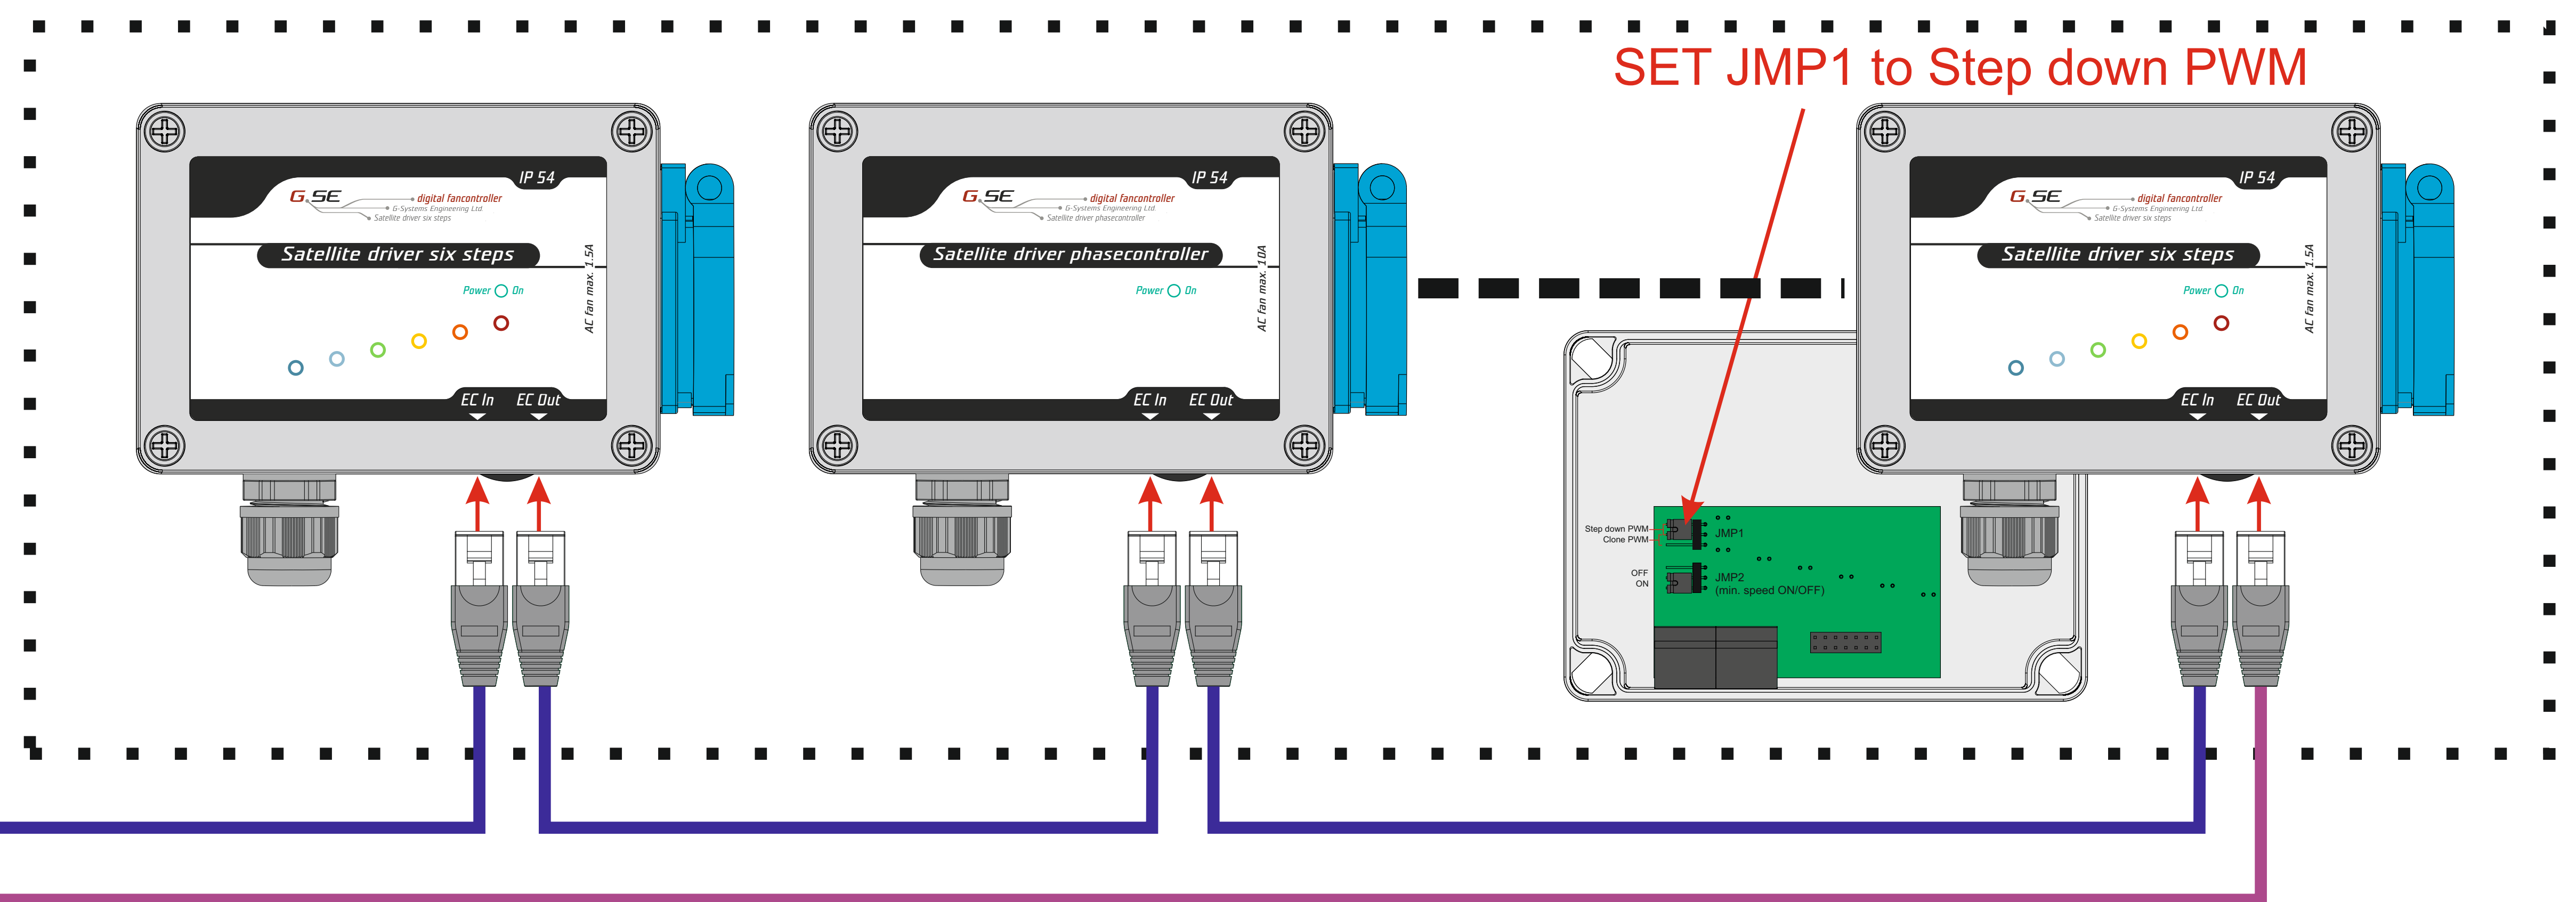


## Satélite para extractor de entrada de aire (controladores esclavos)

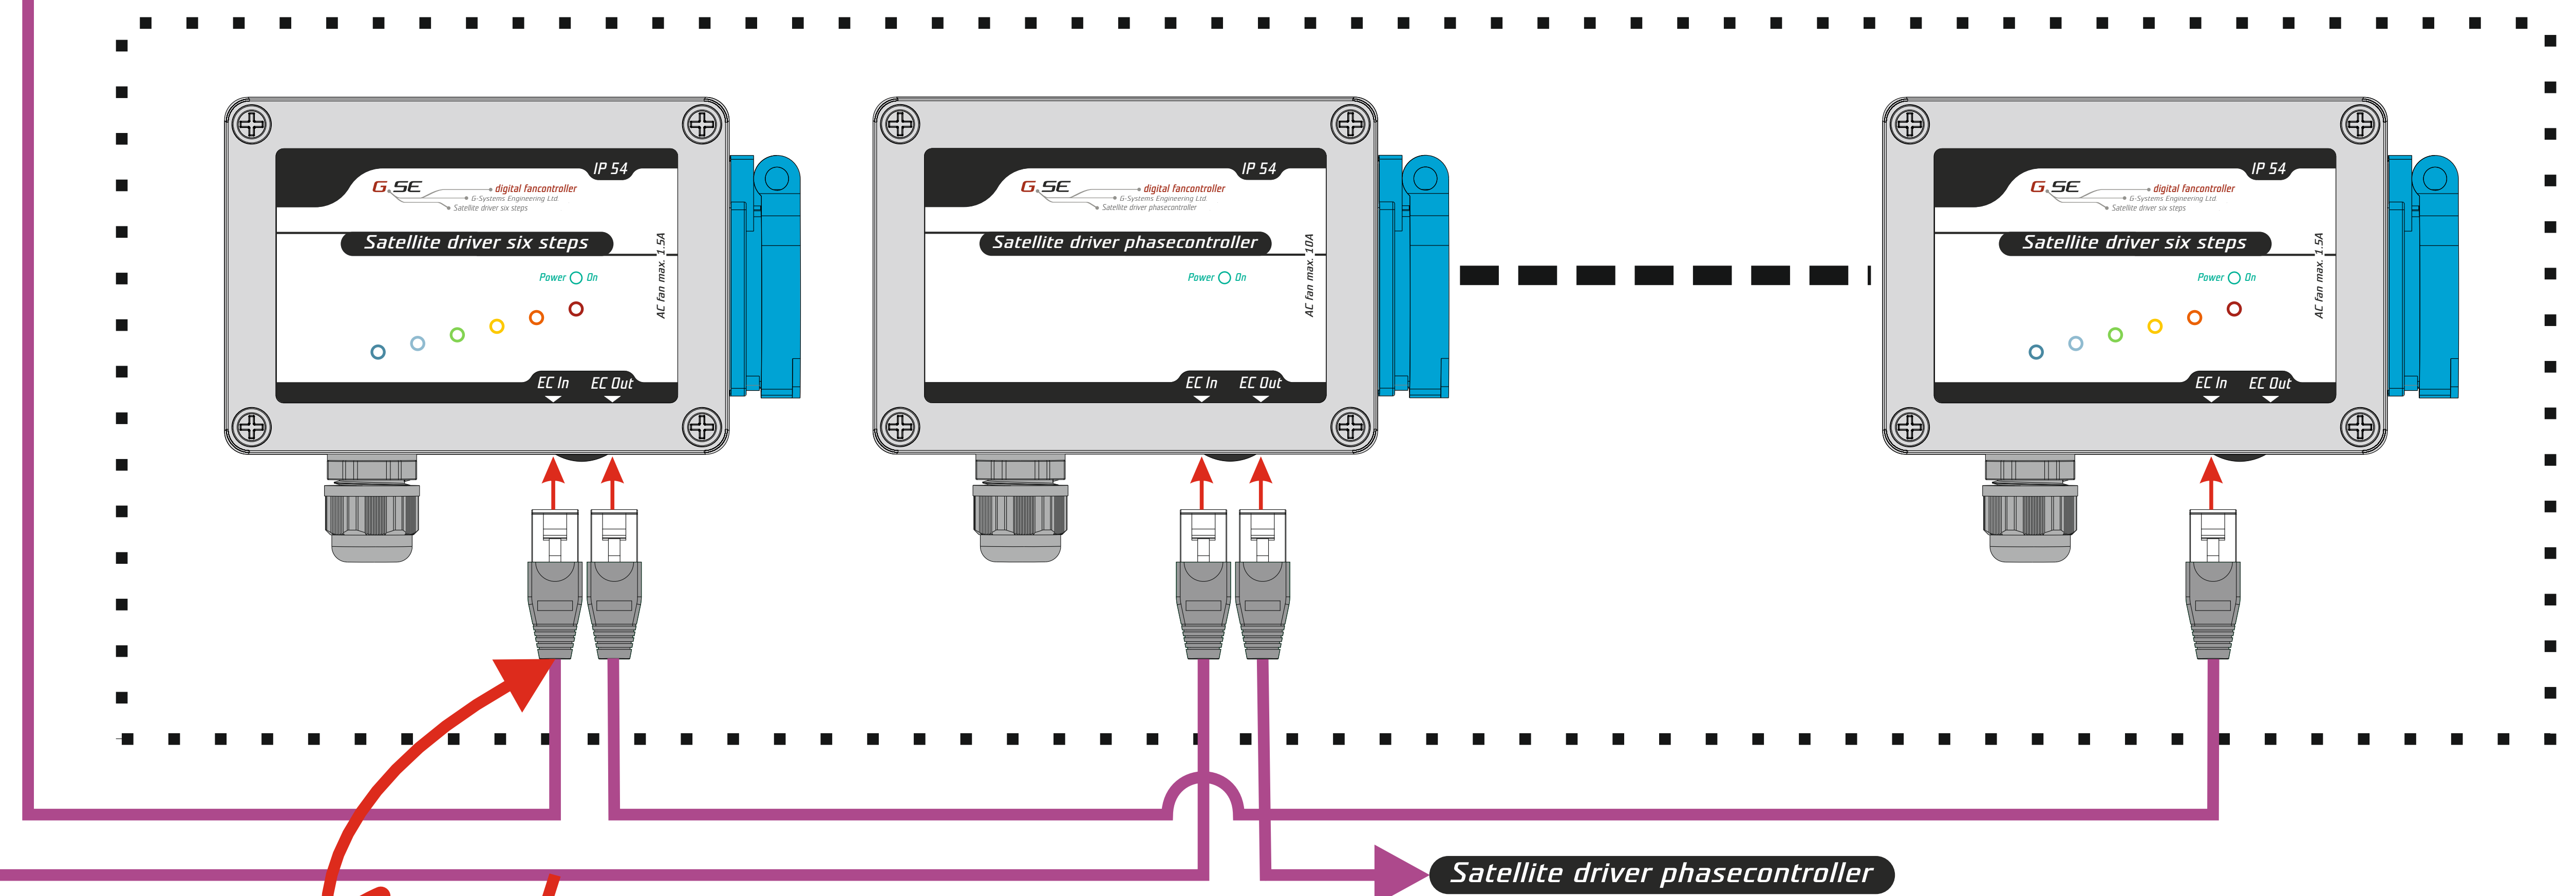


No conecte el controlador al extractor principal de aire de entrada.  
(No se sincronizará con el extractor de aire)




## Master controllers with EC exit

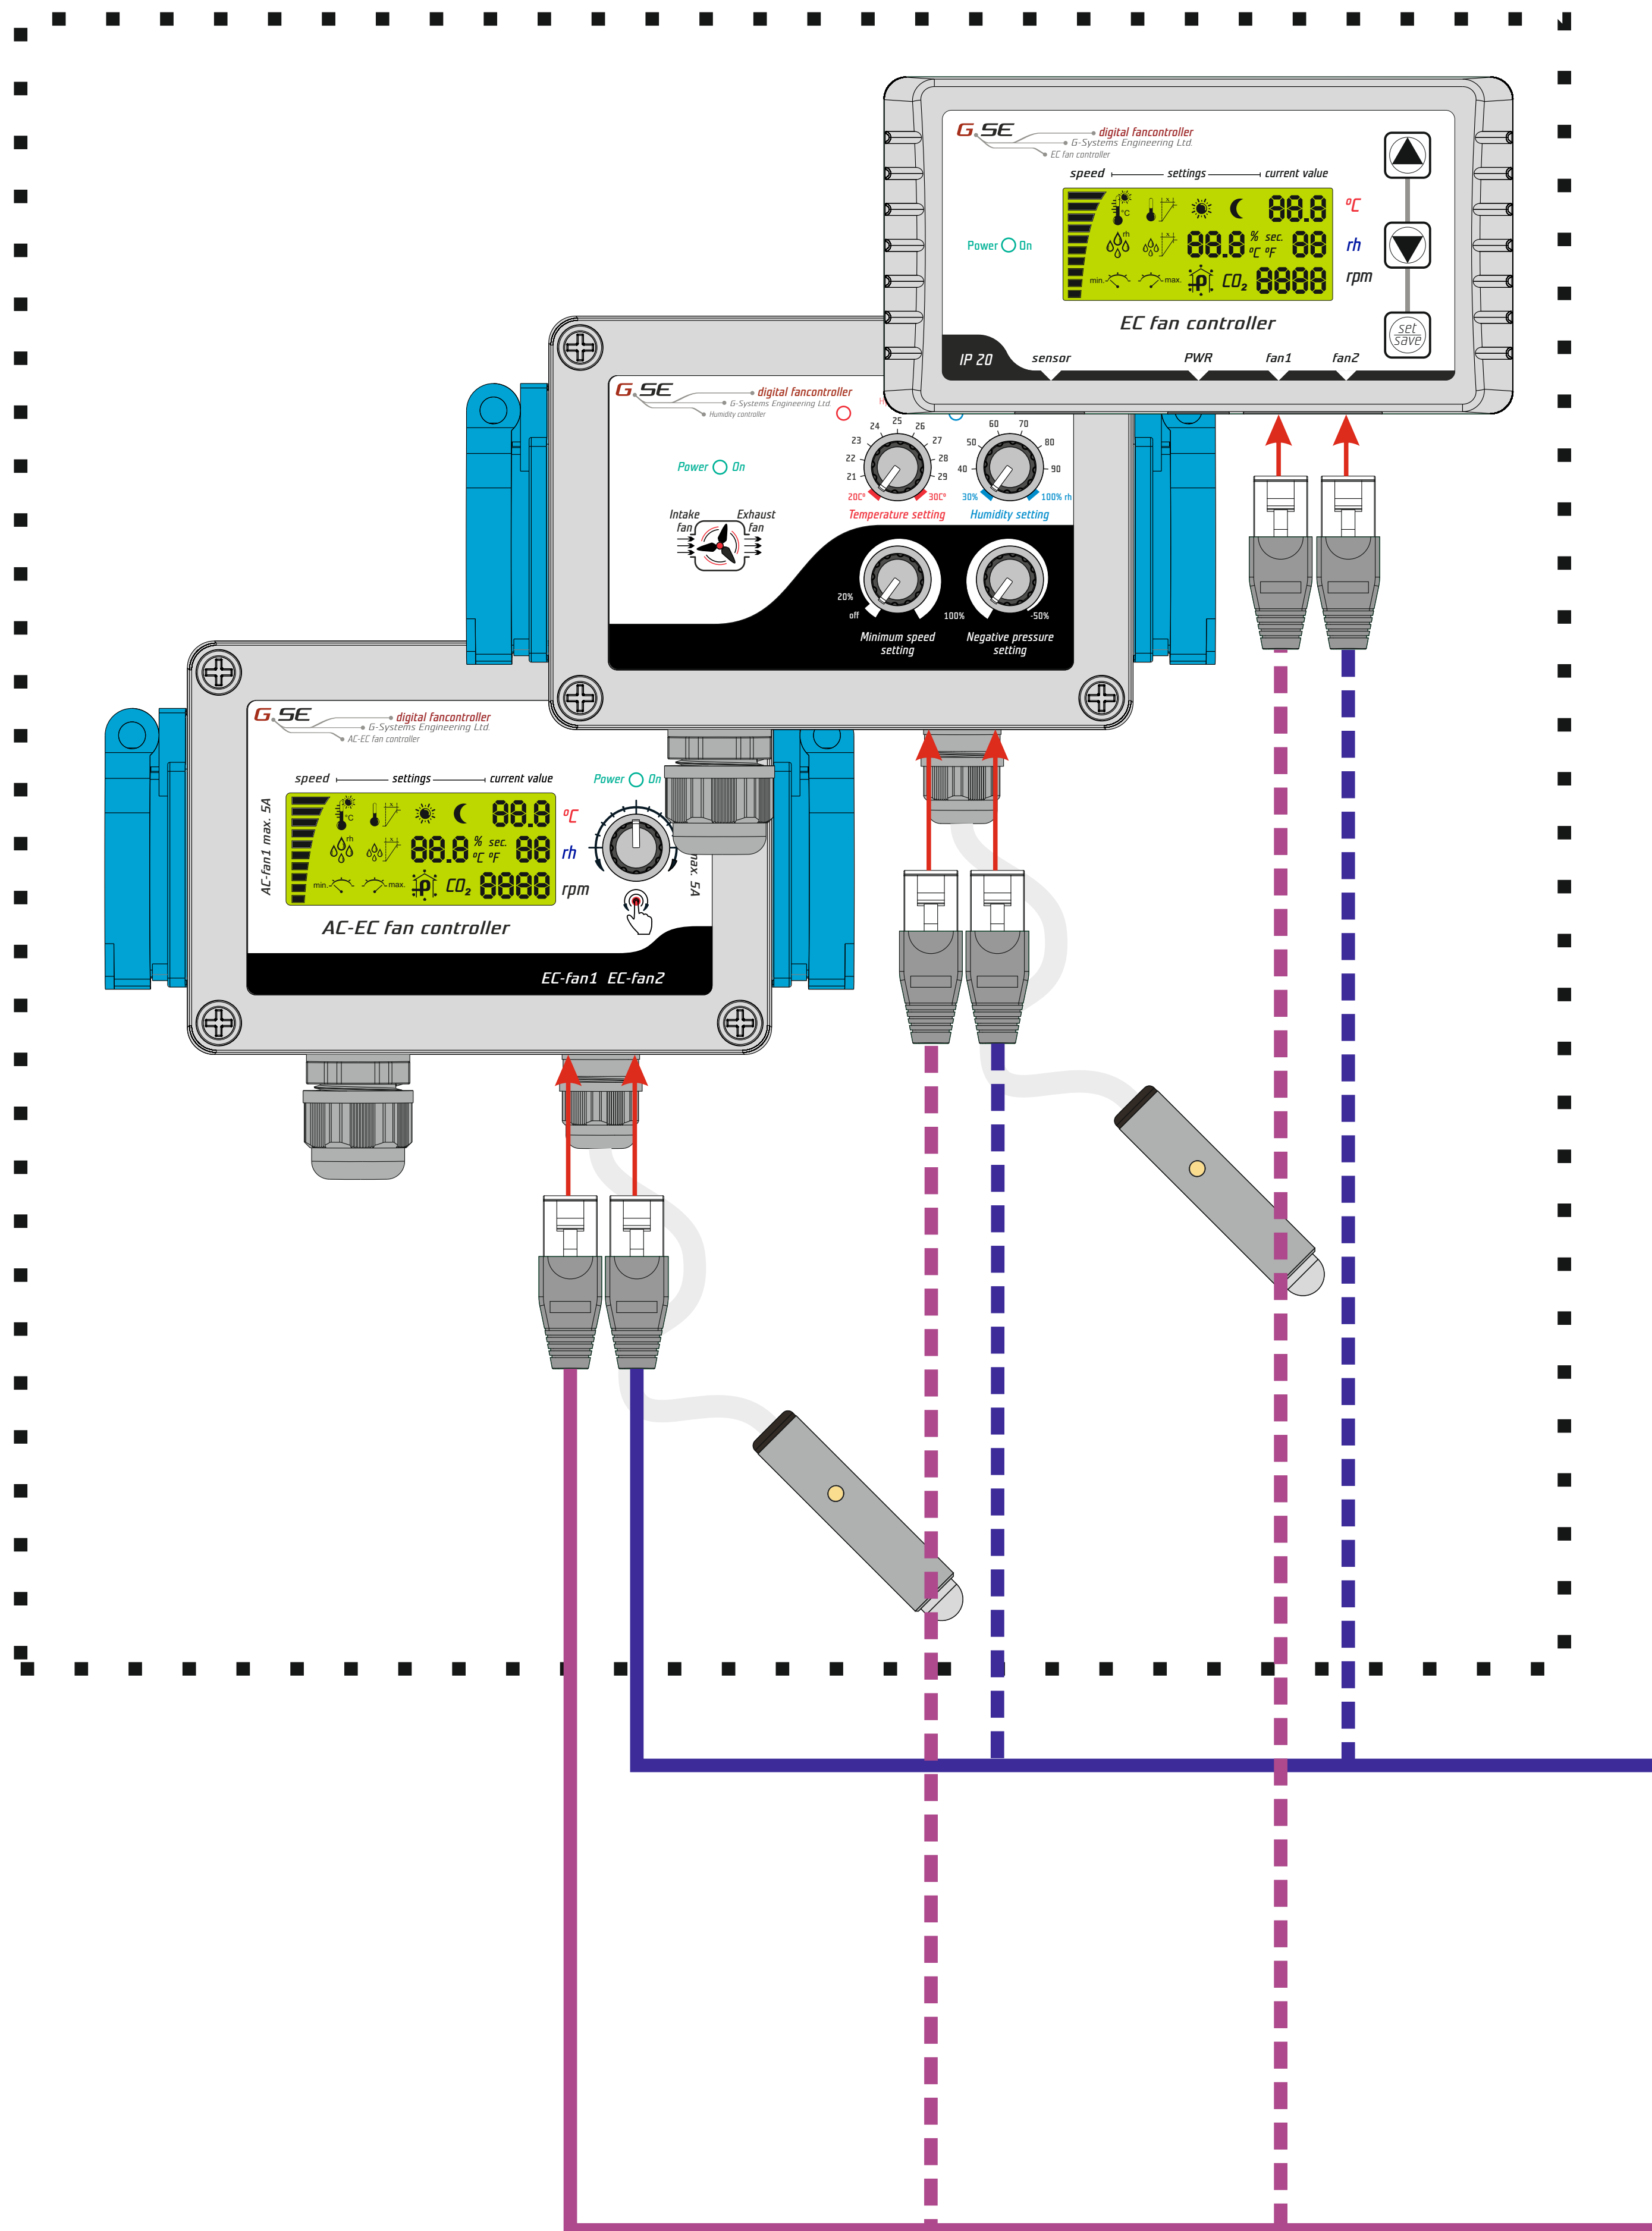

## Exhaust air fan satellite (slave controllers)

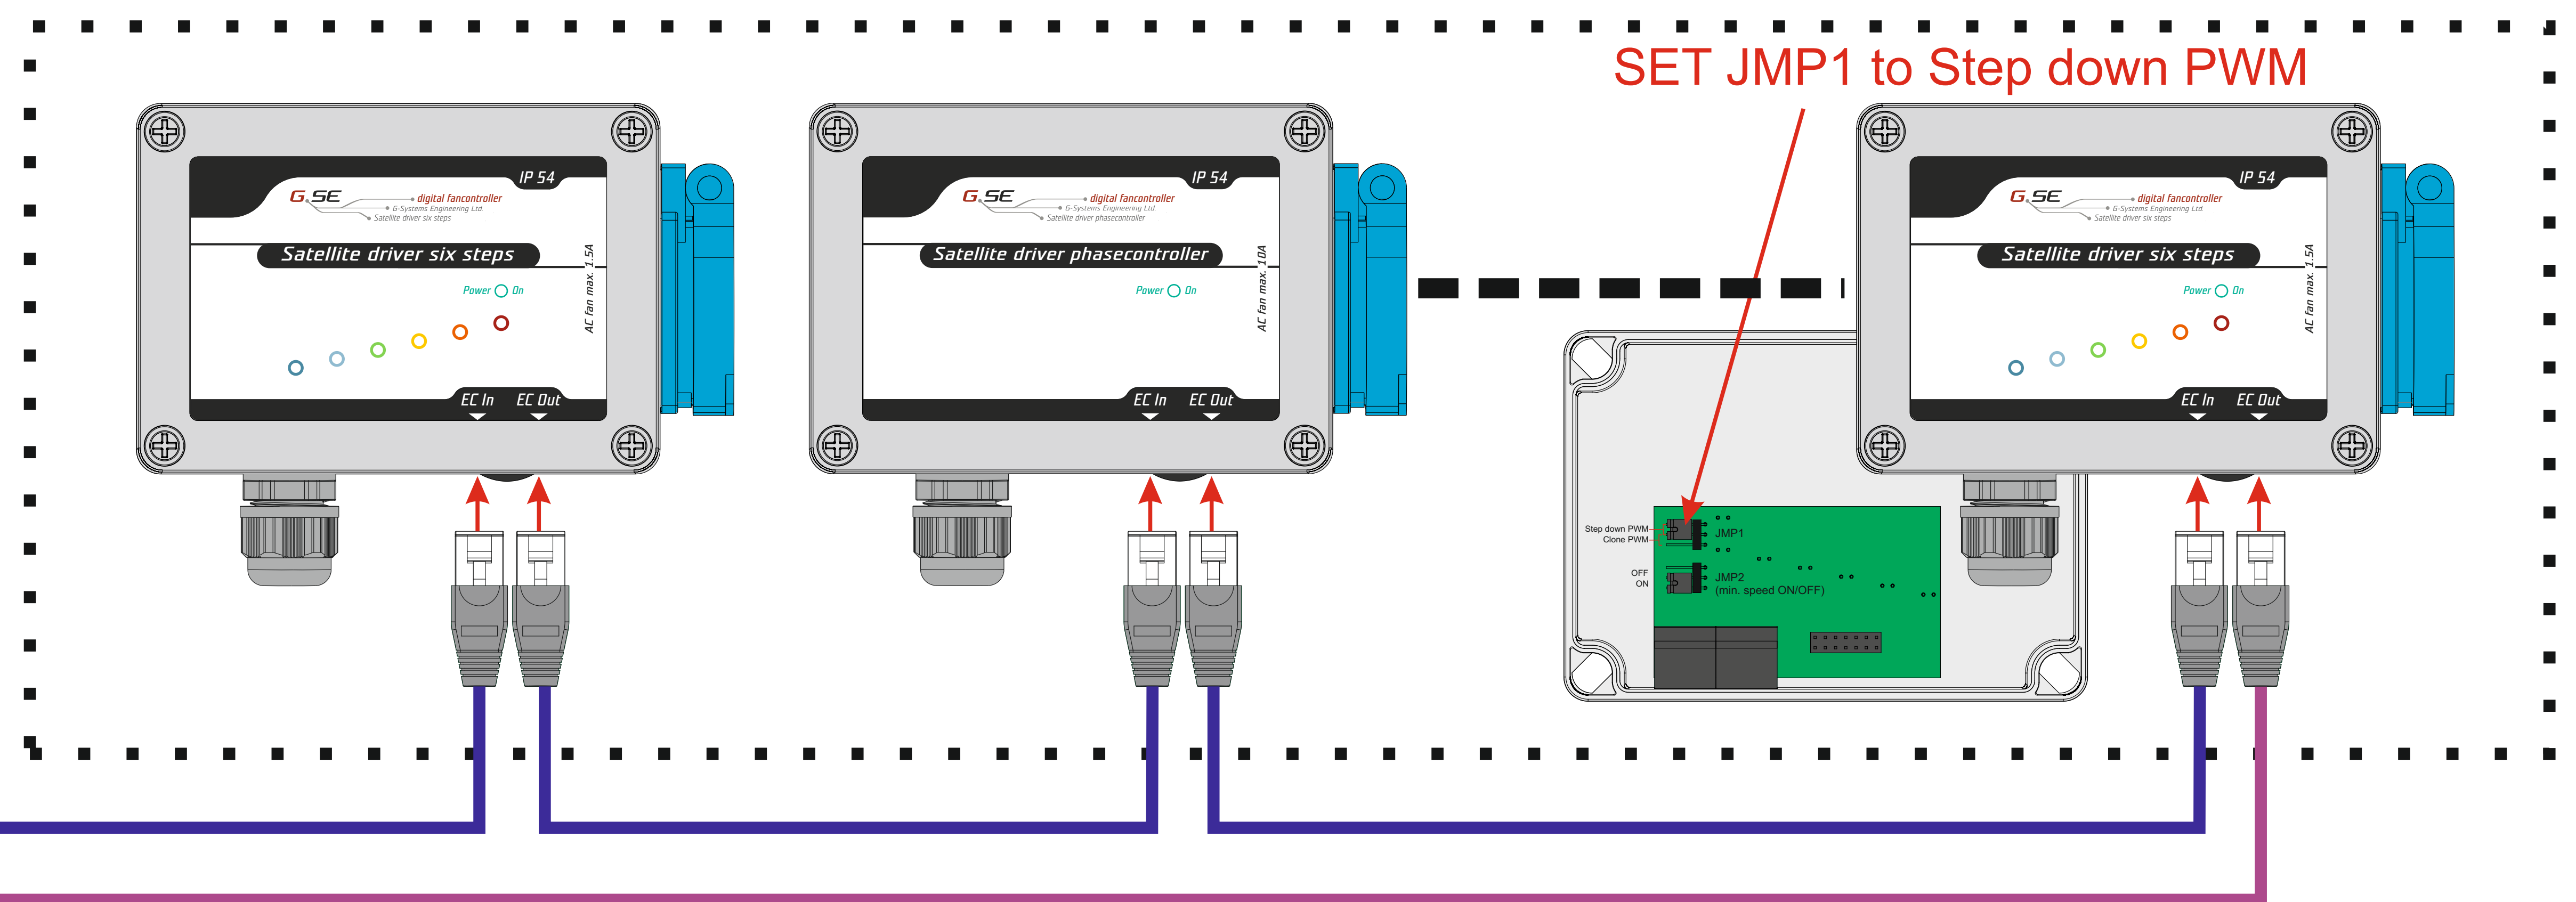

## Intake air fan satellite (slave controllers)

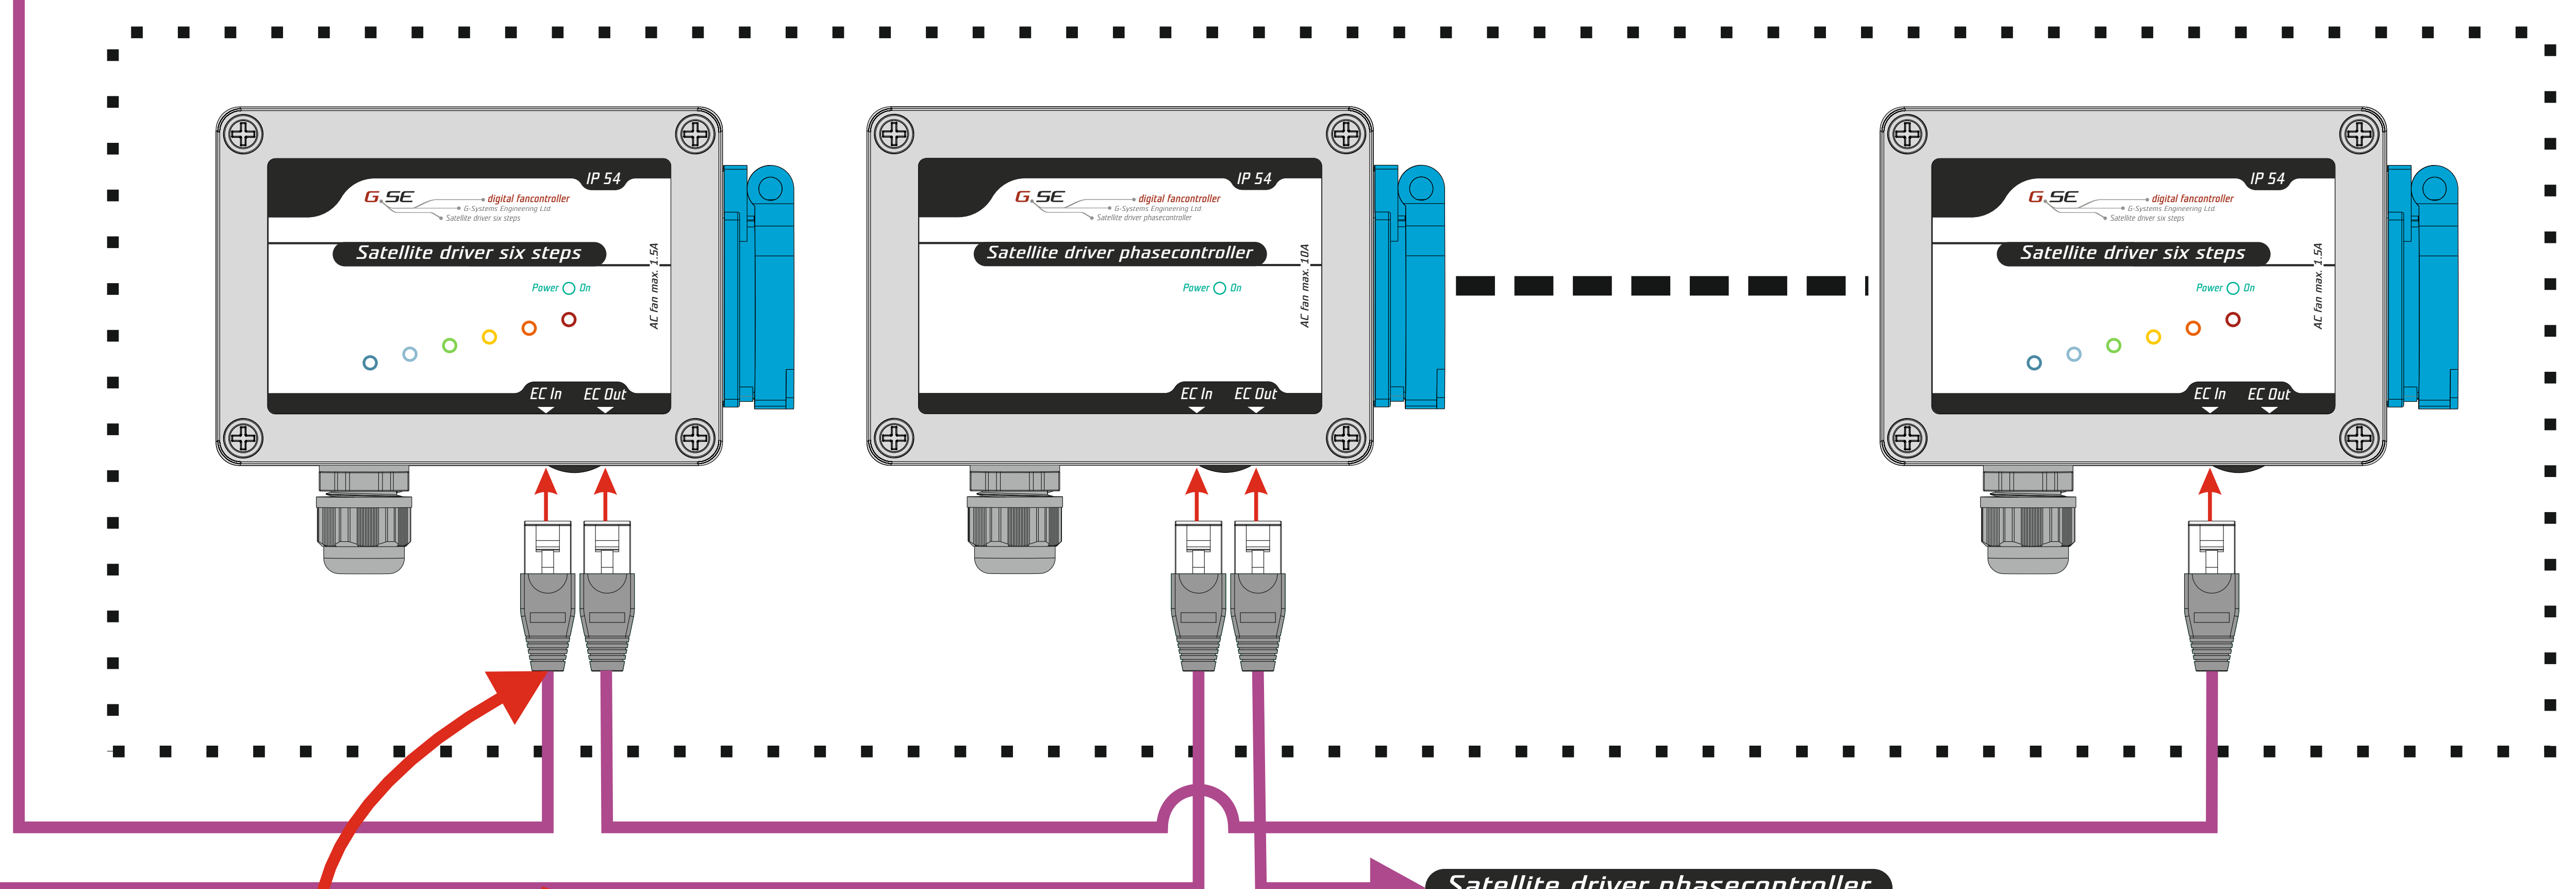

Do not connect master controller to master intake air fan. (It wont switch synchron with the exhaust air fan)